User's Manual

WX1
GateDX-P

vigilantplant.®

YOKOGAWA
Yokogawa Electric Corporation

IM WX1-02E
6th Edition

This manual describes the functions and operating procedures of GateDX-P. To ensure correct use, please read this manual thoroughly before beginning operation. After reading the manual, keep it in a convenient location for quick reference in the event a question arises.
Gate-DXP is a software program that acquires data from the DX100P/DX200 and transfers it to DAQLOGGER or Remote Monitor.

Note

- The contents of this manual are subject to change without prior notice as a result of continuing improvements to the software's performance and functions.
- Every effort has been made in the preparation of this manual to ensure the accuracy of its contents. However, should you have any questions or find any errors, please contact your nearest YOKOGAWA representative as listed on the back cover of this manual.
- Copying or reproducing all or any part of the contents of this manual without the permission of Yokogawa Electric Corporation is strictly prohibited.
- Use of this product (software and this manual) on more than one computer at the same time is prohibited. Use by more than one user is also prohibited.
- Transfer or lending of this product to any third party is prohibited.
- Yokogawa Electric Corporation provides no guarantees other than for physical deficiencies found on the original disk or this manual upon opening the product package.
- **License numbers will not be reissued. Please keep the license number in a safe place.**

Copyrights

- Copyrights for the programs included on the CD-ROM are attributable to Yokogawa Electric Corporation.

Trademarks

- DAQWORX, DAQLOGGER, and DAQEXPLORER are registered trademarks or trademarks of Yokogawa Electric Corporation.
- Microsoft, Windows, and Windows Vista are registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.
- Adobe and Acrobat are registered trademarks or trademarks of Adobe Systems Incorporated.
- Company and product names that appear in this manual are registered trademarks or trademarks of their respective holders.
- The company and product names used in this manual are not accompanied by the registered trademark or trademark symbols (® and ™).

Revisions

- 1st Edition June 2003
- 2nd Edition February 2005
- 3rd Edition June 2007
- 4th Edition January 2009
- 5th Edition January 2011
- 6th Edition October 2011

6th Edition : October 2011 (YK)
All Rights Reserved, Copyright © 2003 Yokogawa Electric Corporation

Software License Agreement

IMPORTANT - PLEASE READ CAREFULLY BEFORE INSTALLING OR USING:

THANK YOU VERY MUCH FOR SELECTING SOFTWARE OF YOKOGAWA ELECTRIC CORPORATION ("YOKOGAWA"). BY INSTALLING OR OTHERWISE USING THE SOFTWARE PRODUCT, YOU AGREE TO BE BOUND BY THE TERMS AND CONDITIONS OF THIS AGREEMENT. IF YOU DO NOT AGREE, DO NOT INSTALL NOR USE THE SOFTWARE PRODUCT AND PROMPTLY RETURN IT TO THE PLACE OF PURCHASE FOR A REFUND, IF APPLICABLE.

Software License Agreement

1. Scope

This Agreement applies to the following software products and associated documentation of Yokogawa (collectively, "Software Product"). Unless otherwise provided by Yokogawa, this Agreement applies to the updates and upgrades of the Software Product which may be provided by Yokogawa.
Software Product: DAQWORX (It is limited to each software that you bought).

2. Grant of License

2.1 Subject to the terms and conditions of this Agreement, Yokogawa hereby grants to you a non-exclusive and non-transferable right to use the Software Product on a single or, the following specified number of, computer(s) and solely for your internal operation use, in consideration of full payment by you to Yokogawa of the license fee separately agreed upon.
Granted number of License: 1 (one)

2.2 Unless otherwise agreed or provided by Yokogawa in writing, the following acts are prohibited:

a) to reproduce the Software Product, except for one archival copy for backup purpose, which shall be maintained with due care subject to this Agreement;
b) to sell, lease, distribute, transfer, pledge, sublicense, make available via the network or otherwise convey the Software Product or the license granted herein to any other person or entity;
c) to use the Software Product on any unauthorized computer via the network;
d) to cause, permit or attempt to dump, disassemble, decompile, reverse-engineer, or otherwise translate or reproduce the Software Product into source code or other human readable format, or to revise or translate the Software Product into other language and change it to other formats than that in which Yokogawa provided;
e) to cause, permit or attempt to remove any copy protection used or provided in the Software Product; or
f) to remove any copyright notice, trademark notice, logo or other proprietary notices or identification shown in the Software Product.

2.3 Any and all technology, algorithms, know-how and process contained in the Software Product are the property or trade secret of Yokogawa or licensors to Yokogawa. Ownership of and all the rights in the Software Product shall be retained by Yokogawa or the licensors and none of the rights will be transferred to you hereunder.

2.4 You agree to maintain the aforementioned property and trade secret of Yokogawa or licensors and key codes in strict confidence, not to disclose it to any party other than your employees, officers, directors or similar staff who have a legitimate need to know to use the Software Product and agreed in writing to abide by the obligations hereunder.

2.5 Upon expiration or termination of this Agreement, the Software Product and its copies, including extracts, shall be returned to Yokogawa and any copies retained in your computer or media shall be deleted irretrievably. If you dispose of media in which the Software Product or its copy is stored, the contents shall be irretrievably deleted.

2.6 The Software Product may contain software which Yokogawa is granted a right to sublicense or distribute by third party suppliers, including affiliates of Yokogawa ("Third Party Software"). If suppliers of the Third Party Software ("Supplier") provide special terms and conditions for the Third Party Software which differ from this Agreement, the special terms and conditions separately provided by Yokogawa shall prevail over this Agreement. Some software may be licensed to you directly by Supplier.

2.7 The Software Product may contain open source software ("OSS"), for which the special terms and conditions separately provided by Yokogawa shall take precedence over this Agreement.

3. Restrictions on Application

3.1 Unless otherwise agreed in writing between you and Yokogawa, the Software Product is not intended, designed, produced or licensed for use in relation to aircraft operation or control, ship navigation or marine equipment control, or ground facility or device for support of the aforesaid operation or control, or for use in relation to rail facility, nuclear related facility, radiation-related equipment, or medical equipment or facility, or under any other circumstances which may require high safety standards.

3.2 If the Software Product is used for the abovementioned purposes, neither Yokogawa nor Supplier assumes liability for any claim or damage arising from the said use and you shall indemnify and hold Yokogawa, Supplier, their affiliates, subcontractors, officers, directors, employees and agents harmless from any liability or damage whatsoever, including any court costs and attorney's fees, arising out of or related to the said use.

4. Limited Warranty

4.1 The Software Product shall be provided to you on an "as is" basis at the time of delivery and except for physical damage to the recording medium containing the Software Product, Yokogawa and Supplier shall disclaim all of the warranties whatsoever, express or implied, and all liabilities therefrom. If any physical defect is found on the recording medium not later than twelve (12) months from delivery, Yokogawa shall replace such defective medium free of charge, provided that the defective medium shall be returned to the service office designated by Yokogawa at your expense within the said twelve (12) months. THIS LIMITED WARRANTY PROVIDED IN THIS CLAUSE IS IN LIEU OF ALL OTHER WARRANTIES OF ANY KIND WHATSOEVER AND YOKOGAWA HEREBY DISCLAIMS ALL OTHER WARRANTIES RELATING TO THE SOFTWARE PRODUCT, WHETHER EXPRESSED OR IMPLIED, INCLUDING WITHOUT LIMITATION, ANY IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR ANY PARTICULAR PURPOSE, NON-INFRINGEMENT, QUALITY, FUNCTIONALITY, APPROPRIATENESS, ACCURACY, RELIABILITY AND RECENCY. IN NO EVENT SHALL YOKOGAWA WARRANT THAT THERE IS NO INCONSISTENCY OR INTERFERENCE BETWEEN THE SOFTWARE PRODUCT AND OTHER SOFTWARE NOR SHALL BE LIABLE THEREFOR. The warranty provisions of the applicable law are expressly excluded to the extent permitted.

4.2 At the sole discretion of Yokogawa, Yokogawa may upgrade the Software Product to the new version number ("Upgrade") and make it available to you at your expense or free of charge as Yokogawa deems fit. In no event shall Yokogawa be obliged to upgrade the Software Product or make the Upgrade available to you.

4.3 Certain maintenance service may be available for some types of Software Product at Yokogawa's current list price. Scope and terms and conditions of the maintenance service shall be subject to those separately provided by Yokogawa. Unless otherwise provided in Yokogawa catalogues or General Specifications, maintenance services will be available only for the latest version and the immediately preceding version. In no event will service for the immediately preceding version be available for more than 5 years after the latest version has been released. In addition, no service will be provided by Yokogawa for the Software Product which has been discontinued for more than 5 years. Notwithstanding the foregoing, maintenance service may not be available for non-standard Software Product. Further, in no event shall Yokogawa provide any service for the Software Product which has been modified or changed by any person other than Yokogawa.

5. Infringement

5.1 If you are warned or receive a claim by a third party that the Software Product in its original form infringes any third party's patent (which is issued at the time of delivery of the Software Product), trade mark, copyright or other intellectual property rights ("Claim"), you shall promptly notify Yokogawa thereof in writing.

5.2 If the infringement is attributable to Yokogawa, Yokogawa will defend you from the Claim at Yokogawa's expense and indemnify you from the damages finally granted by the court or otherwise agreed by Yokogawa out of court. The foregoing obligation and indemnity of Yokogawa shall be subject to that i) you promptly notify Yokogawa of the Claim in writing as provided above, ii) you grant to Yokogawa and its designees the full authority to control the defense and settlement of such Claim and iii) you give every and all necessary information and assistance to Yokogawa upon Yokogawa's request.

5.3 If Yokogawa believes that a Claim may be made or threatened, Yokogawa may, at its option and its expense, either a) procure for you the right to continue using the Software Product, b) replace the Software Product with other software product to prevent infringement, c) modify the Software Product, in whole or in part, so that it become non-infringing, or d) if Yokogawa believes that a) through c) are not practicable, terminate this Agreement and refund you the paid-up amount of the book value of the Software Product as depreciated.

5.4 Notwithstanding the foregoing, Yokogawa shall have no obligation nor liability for, and you shall defend and indemnify Yokogawa and its suppliers from, the Claim, if the infringement is arising from a) modification of the Software Product made by a person other than Yokogawa, b) combination of the Software Product with hardware or software not furnished by Yokogawa, c) design or instruction provided by or on behalf of you, d) not complying with Yokogawa's suggestion, or e) any other causes not attributable to Yokogawa.

5.5 This section states the entire liability of Yokogawa and its suppliers and the sole remedy of you with respect to any claim of infringement of a third party's intellectual property rights. Notwithstanding anything to the contrary stated herein, with respect to the claims arising from or related to the Third Party Software or OSS, the special terms and conditions separately provided for such Third Party Software or OSS shall prevail.

6. Limitation of Liability

6.1 EXCEPT TO THE EXTENT THAT LIABILITY MAY NOT LAWFULLY BE EXCLUDED IN CONTRACT, YOKOGAWA AND SUPPLIERS SHALL NOT BE LIABLE TO ANY PERSON OR LEGAL ENTITY FOR LOSS OR DAMAGE, WHETHER DIRECT, INDIRECT, SPECIAL, INCIDENTAL, CONSEQUENTIAL OR EXEMPLARY DAMAGES, OR OTHER SIMILAR DAMAGES OF ANY KIND, INCLUDING WITHOUT LIMITATION, DAMAGES FOR LOSS OF BUSINESS PROFITS, BUSINESS INTERRUPTION, LOSS OR DESTRUCTION OF DATA, LOSS OF AVAILABILITY AND THE LIKE, ARISING OUT OF THE USE OR INABILITY TO USE OF THE SOFTWARE PRODUCT, OR ARISING OUT OF ITS GENERATED APPLICATIONS OR DATA, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, WHETHER BASED IN WARRANTY (EXPRESS OR IMPLIED), CONTRACT, STRICT LIABILITY, TORT (INCLUDING NEGLIGENCE), OR ANY OTHER LEGAL OR EQUITABLE GROUNDS. IN NO EVENT YOKOGAWA AND SUPPLIER'S AGGREGATE LIABILITY FOR ANY CAUSE OF ACTION WHATSOEVER (INCLUDING LIABILITY UNDER CLAUSE 5) SHALL EXCEED THE DEPRECIATED VALUE OF THE LICENSE FEE PAID TO YOKOGAWA FOR THE USE OF THE CONCERNED PART OF THE SOFTWARE PRODUCT. If the Software Product delivered by Yokogawa is altered, modified or combined with other software or is otherwise made different from Yokogawa catalogues, General Specifications, basic specifications, functional specifications or manuals without Yokogawa's prior written consent, Yokogawa shall be exempted from its obligations and liabilities under this Agreement or law.

6.2 Any claim against Yokogawa based on any cause of action under or in relation to this Agreement must be given in writing to Yokogawa within three (3) months after the cause of action accrues.

7. Export Control

You agree not to export or provide to any other countries, whether directly or indirectly, the Software Product, in whole or in part, without prior written consent of Yokogawa. If Yokogawa agrees such exportation or provision, you shall comply with the export control and related laws, regulations and orders of Japan, the United States of America, and any other applicable countries and obtain export/import permit and take all necessary procedures under your own responsibility and at your own expense.

8. Audit; Withholding

8.1 Yokogawa shall have the right to access and audit your facilities and any of your records, including data stored on computers, in relation to the use of the Software Product as may be reasonably necessary in Yokogawa's opinion to verify that the requirements of this Agreement are being met.

8.2 Even after license being granted under this Agreement, should there be any change in circumstances or environment of use which was not foreseen at the time of delivery and, in Yokogawa's reasonable opinion, is not appropriate for using the Software Product, or if Yokogawa otherwise reasonably believes it is too inappropriate for you to continue using the Software Product, Yokogawa may suspend or withhold the license provided hereunder.

9. Assignment

If you transfer or assign the Software Product to a third party, you shall expressly present this Agreement to the assignee to ensure that the assignee comply with this Agreement, transfer all copies and whole part of the Software Product to the assignee and shall delete any and all copy of the Software Product in your possession irretrievably. This Agreement shall inure to the benefit of and shall be binding on the assignees and successors of the parties.

10. Termination

Yokogawa shall have the right to terminate this Agreement with immediate effect upon notice to you, if you breach any of the terms and conditions hereof. Upon termination of this Agreement, you shall promptly cease using the Software Product and, in accordance with sub-clause 2.5, return or irretrievably delete all copies of the Software Product, certifying the same in writing. In this case the license fee paid by you for the Software Product shall not be refunded. Clauses 2.4 and 2.5, 3, 5, 6 and 11 shall survive any termination of this Agreement.

11. Governing Law; Disputes

This Agreement shall be governed by and construed in accordance with the laws of Japan.

Any dispute, controversies, or differences which may arise between the parties hereto, out of, in relation to or in connection with this Agreement ("Dispute") shall be resolved amicably through negotiation between the parties based on mutual trust. Should the parties fail to settle the Dispute within ninety (90) days after the notice is given from either party to the other, the Dispute shall be addressed in the following manner:

(i) If you are a Japanese individual or entity, the Dispute shall be brought exclusively in the Tokyo District Court (The Main Court) in Japan.

(ii) If you are not a Japanese individual or entity, the Dispute shall be finally settled by arbitration in Tokyo, Japan in accordance with the Commercial Arbitration Rules of the Japan Commercial Arbitration Association. All proceedings in arbitration shall be conducted in the English language, unless otherwise agreed. The award of arbitration shall be final and binding upon both parties, however, each party may make an application to any court having jurisdiction for judgment to be entered on the award and/or for enforcement of the award.

12. Miscellaneous

12.1 This Agreement supersedes all prior oral and written understandings, representations and discussions between the parties concerning the subject matter hereof to the extent such understandings, representations and discussions should be discrepant or inconsistent with this Agreement.

12.2 If any part of this Agreement is found void or unenforceable, it shall not affect the validity of the balance of the Agreement, which shall remain valid and enforceable according to its terms and conditions. The parties hereby agree to attempt to substitute for such invalid or unenforceable provision a valid or enforceable provision that achieves to the greatest extent possible the economic, legal and commercial objectives of the invalid or unenforceable provision.

12.3 Failure by either party to insist on performance of this Agreement or to exercise a right when entitled does not prevent such party from doing so at a later time, either in relation to that default or any subsequent one.

End of document

Overview of This Manual

Structure of This Manual

This user's manual consists of the following chapters.

Chapter	Title	Description
1	**Overview**	Gives an overview of the GateDX-P software.
		Lists the PC requirements for running Gate-DXP and gives information about system configuration.
2	**Operating Procedure**	Gives procedures for entering environment and data logging interval settings, and how to monitor the operational status of the software.
3	**Detailed Description of Functions**	Provides a detailed description of the functions of GateDX-P. Lists error messages, their causes, and their corrective actions.
Index		An alphabetical index of the manual's contents.

Scope of This Manual

This manual does not explain the basic operations of your PC's operating system (OS). For information regarding the basic operations of Windows, see the Windows user's manual.

Conventions Used in This Manual

- **Units**
  K Denotes 1024. Example: 10 KB
  M Denotes 1024K. Example: 10 MB
  G Denotes 1024M. Example: 2 GB

- **Boldface Type**
  Hardware and software controls that the user manipulates such as dialog boxes, buttons, and menu commands are often set in boldface type.

- **Subheadings**
  On pages in chapters 1 through 3 that describe operating procedures, the following subheadings are used to distinguish the procedure from their explanations.

Procedure This subsection contains the operating procedure used to carry out the function described in the current section. All procedures are written with inexperienced users in mind; experienced users may not need to carry out all the steps.

Note Calls attention to information that is important for proper operation of the instrument.

Contents

Software License Agreement ii
Overview of This Manual iv

Chapter 1 Overview

1.1 Overview of GateDX-P Functions 1-1
1.2 System Overview 1-2

Chapter 2 Operation Procedure

2.1 Running and Exiting GateDX-P 2-1
2.2 Entering Environment Settings 2-2
2.3 Connecting from DAQLOGGER or Remote Monitor 2-6
2.4 Process Run/Stop and Service Run/Stop 2-7
2.5 Viewing the Status of the Executable Function 2-8
2.6 Viewing Version Information 2-9

Chapter 3 Detailed Description of Functions

3.1 Overview 3-1
Environment Setting Functions 3-1
Executable Function 3-1
3.2 Detailed Description of Functions 3-2
Serial Port Settings 3-2
Recorder Settings 3-2
Scan Interval 3-2
Communication Retry 3-2
Port Settings 3-3
Running/Stopping the Executable Function 3-3
Monitor Server Function of the Executable Function 3-3
Executable Function Status Display 3-3
Group and Channel Assignments 3-3
Channel Names, Tag IDs, and Tag Names 3-4
Channel Colors 3-4
3.3 Error Messages and Corrective Actions 3-5
Error 3-5
Message 3-5
Executable Function Messages 3-5

Index

1.1 Overview of GateDX-P Functions

Gate-DXP is a software program that acquires data from the DX100P/DX200 and transfers it to DAQLOGGER or Remote Monitor. Using GateDX-P allows you to monitor data on DAQLOGGER or Remote Monitor that is measured on the DX100P or DX200P.
Yokogawa's DAQLOGGER is a software program that allows users to open a connection from their PC to various kinds of Yokogawa recorders (the mR, VR, DARWIN, DX, MV, and CX) and perform data logging and monitoring.
Yokogawa's Remote Monitor is application software that enables monitoring of data logged by recorders or data logging software.

Features

- Runs as a Windows application.
- Up to 16 DX100P/DX200Ps can be linked.
- Measurement can be performed at intervals of up to 0.5 seconds*.
  * However, DAQLOGGER's shortest interval is 1 second. Also, the maximum speed of 0.5 seconds may not be attainable depending on the amount of data being read, the response time of the device, and the communication speed.

1.2 System Overview

System

This software can connect with and download data from DX100P/DX200Ps having the following characteristics.

- DX100P: Style 4 or later. The /C2 option is required for RS-232 communications. The /C3 option is required for RS-422-A/485 communications.
- DX200P: Style 4 or later. The /C2 option is required for RS-232 communications. The /C3 option is required for RS-422-A/485 communications.

Required Operating Systems

Run DAQWORX under any of the following operating systems.

- Windows 2000 Professional SP4
- Windows XP Home Edition SP3
- Windows XP Professional SP3 (excluding Windows XP Professional x64 Editions)
- Windows Vista Home Premium SP2 (excluding the 64-bit editions)
- Windows Vista Business SP2 (excluding the 64-bit editions)
- Windows 7 Home Premium, SP1 (32-bit and 64-bit editions)
- Windows 7 Professional, SP1 (32-bit and 64-bit editions)

The language displayed by the software under different language versions of the OS are as follows.

OS Language	Software Language
Japanese	Japanese
Other	English

Hardware Requirements

The following hardware is required to use GateDX-P.

- PC: A PC that runs one of the OS above, and that meets the following CPU and memory requirements.
  When Using Windows 2000 or Windows XP
  Pentium 4, 1.6 GHz or faster Intel x64 or x86 processor; 512 MB or more of memory
  When Using Windows Vista
  Pentium 4, 3 GHz or faster Intel x64 or x86 processor; 2 GB or more of memory
  When Using Windows 7
  32-bit edition: Intel Pentium 4, 3 GHz or faster x64 or x86 processor; 2 GB or more of memory
  64-bit edition: Intel x64 processor that is equivalent to Intel Pentium 4, 3 GHz or faster; 2 GB or more of memory
- Free disk space: 200 MB or more
- Communication device: An Ethernet (when connecting to DAQLOGGER or Remote Monitor), RS-232, or GPIB port that is recognized by the operating system.
- CD-ROM drive: Used to install the software
- Peripheral devices: A mouse supported by the operating system
- GP-IB port: Required for GPIB communications between the software and a WT series instrument
- Monitor: A video card that is recommended for the OS and a display that is supported by the OS, has a resolution of 1024×768 or higher, and that can show 65,536 colors (16-bit, high color) or more.

Note

An RS-232 to RS-422-A/485 converter is required to perform communications between the software and another DX100P/DX200P via RS-422-A/485 (Yokogawa ML2 RS232C/RS485 recommended).

System Configuration

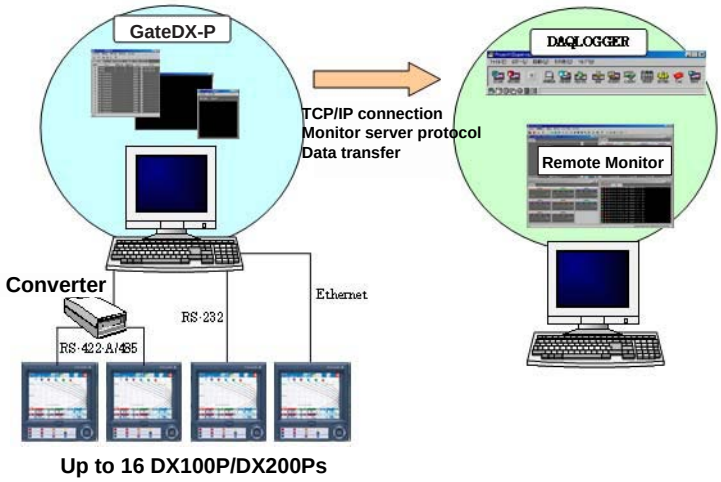

It is recommended that you run GateDX-P and DAQLOGGER on separate PCs.

Software Configuration

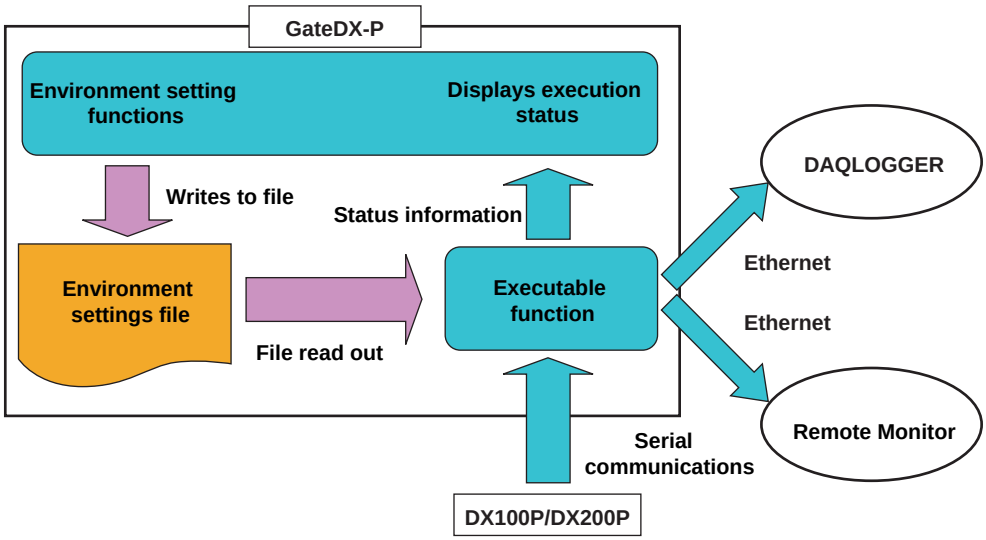

GateDX-P Configurator consists of two separate software functions. The role of each function within the configurator is as follows:

- **Environment Setting Functions**
  Acts as the user interface for GateDX-P.
  These functions allow the user to enter various settings required by the executable function for communications with the DX100P/DX200P, as well as those required for data transfers to and from DAQLOGGER and Remote Monitor. The user can also use the environment setting functions to start/stop the executable function, or view the execution status.
- **Executable Function**
  The software reads data from the DX100P/DX200P at fixed intervals. It also acts as a monitor server, transferring data to DAQLOGGER and Remote Monitor.

2.1 Running and Exiting GateDX-P

Running the Software

Procedure

1. From the Windows Start menu, choose **Programs > YOKOGAWA DAQWORX > GateDXP > GateDX-P**.

   The Gate-DX-P Configurator opens, displaying the user interface.

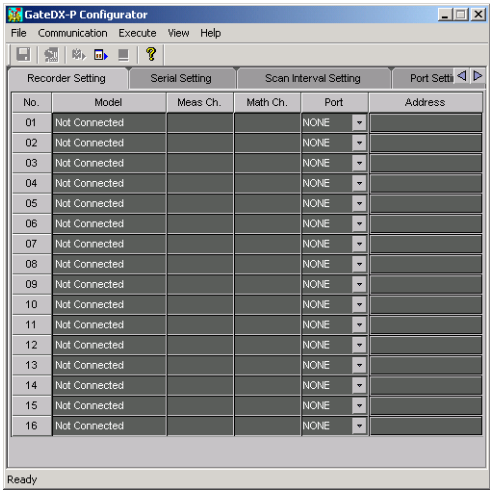

Note

- When you start GateDX-P it is restored to the same status that was active during the previous session.
- If the program is closed while a process or service is running, the license will be considered to be “in use.” If the message, “Invalid license number. Please reinstall.” appears when restarting the program, it may indicate that the user is attempting to run a Gate program in excess of the number of available licenses.

Starting GateDX-P in Acquisition Start Mode

1. From the Windows Start menu, choose **Programs > YOKOGAWA DAQWORX > GateDXP > GateDX-P**, then right-click GateDX-P and select Create Shortcut.
2. Right-click the shortcut icon and select Properties.
3. Choose the Shortcut tab, then add /START to the right of the path in the Target box and click OK.

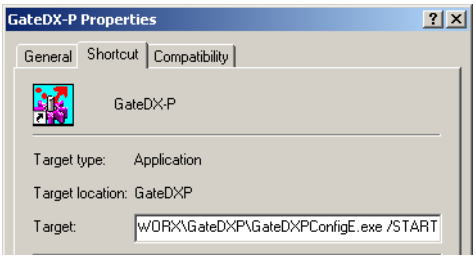

4. Choose the shortcut from the Windows Start menu. The connection status of the previous session is restored, and acquisition begins.

Exiting the Software

Procedure

1. Choose **File > Exit** from the menu bar, or click the X button at the right end of the title bar.

   GateDX-P closes.

2.2 Entering Environment Settings

The following settings can be entered using the configurator.

- DX100P/DX200P assignments, communications settings, and login settings
- Acquisition interval settings for each DX100P/DX200P
- Port number settings (for the monitor server) as needed
- The settings can be saved

Serial Port Settings

Procedure

1. Click the Serial Setting tab or choose View > Serial Setting from the menu bar.
The Serial Setting tab is displayed.

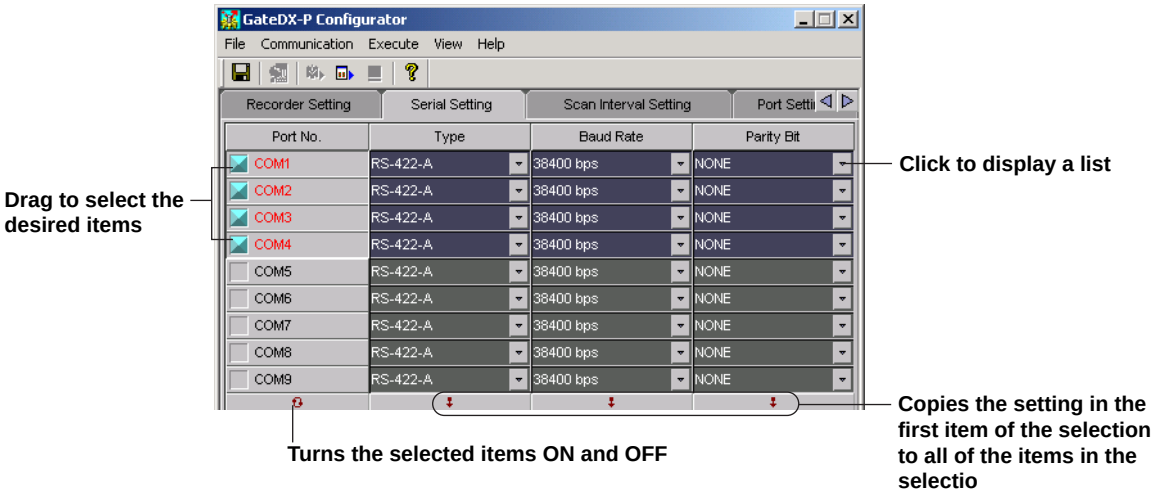
GateDX-P Configurator
File Communication Execute View Help
Recorder Setting
Serial Setting
Scan Interval Setting
Port Setti
Port No.
Type
Baud Rate
Parity Bit
COM1 RS-422-A 38400 bps NONE
COM2 RS-422-A 38400 bps NONE
COM3 RS-422-A 38400 bps NONE
COM4 RS-422-A 38400 bps NONE
COM5 RS-422-A 38400 bps NONE
COM6 RS-422-A 38400 bps NONE
COM7 RS-422-A 38400 bps NONE
COM8 RS-422-A 38400 bps NONE
COM9 RS-422-A 38400 bps NONE
Drag to select the desired items
Click to display a list
Turns the selected items ON and OFF
Copies the setting in the first item of the selection to all of the items in the selectio

2. Enter settings for each item.

Port number:	ON (blue)/OFF (gray)
Type:	RS-232-C, RS-422-A/485
Baud rate:	9600,19200,38400
Parity:	NONE, ODD, EVEN

Recorder Settings

Procedure

1. Click the Recorder Setting tab or choose **View > Recorder Setting** from the menu bar.

The Recorder Setting tab is displayed.

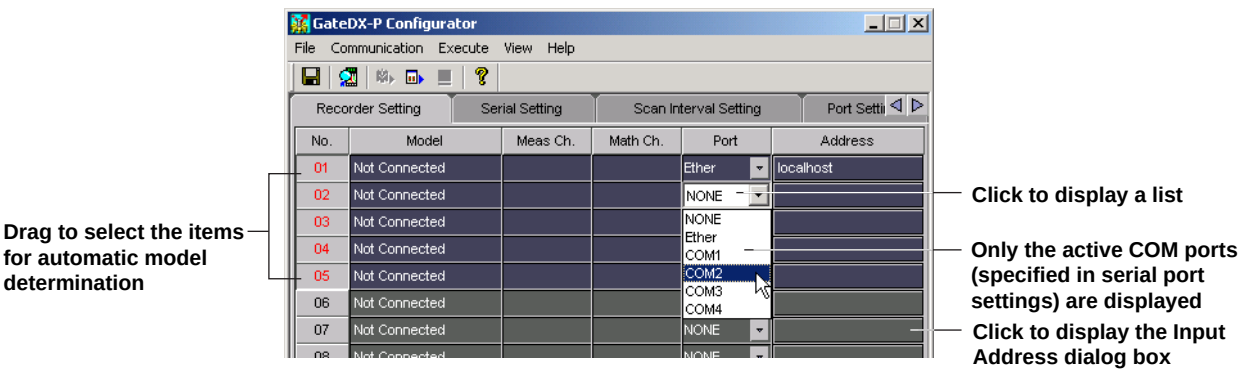

Port Settings

2. Enter the port and address.

Port: Select the port to be used for the connection. Only the numbered COM ports turned ON in the license setting tab are displayed.

For Ports Set to Ethernet

Click a cell in the address column to open the dialog box in the figure below.

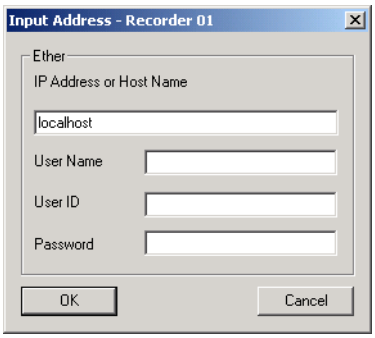

Enter the following settings.

IP address or host name: enter the IP address or host name of the DX100P/DX200P to which you wish to connect.

User name: enter the user name specified on the DX100P/DX200P to which you wish to connect.

User ID: enter the user ID specified on the DX100P/DX200P to which you wish to connect.

Password: enter the password specified on the DX100P/DX200P to which you wish to connect.

Note

When logging on to the DX100P/DX200P from GateDX-P, the default password for the DX100P/DX200P cannot be used. If it is used, login will fail.

For Ports Set to COM

Click a cell in the address column to open the dialog box in the figure below.

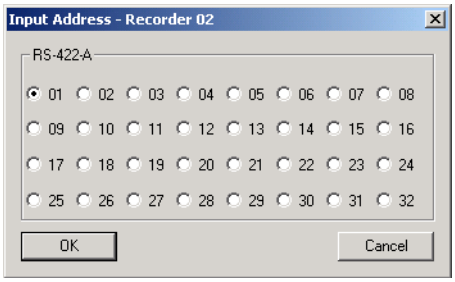

Select an RS-422-A address.

Address: only valid for COM ports using Ethernet or RS-422-A/485.

Automatic Model Determination

3. You can drag to select the items for automatic model determination.
4. Click Auto determination on the toolbar or choose **Communication > Recorder Model Determination** from the menu bar.

Auto determination button

The following items are displayed.

Model:	The specific DX100P/DX200P models to be connected.
Measurement channels:	The number of measurement channels on the connected DX100P/DX200P.
Math channels:	The number of math channels on the connected DX100P/DX200P.

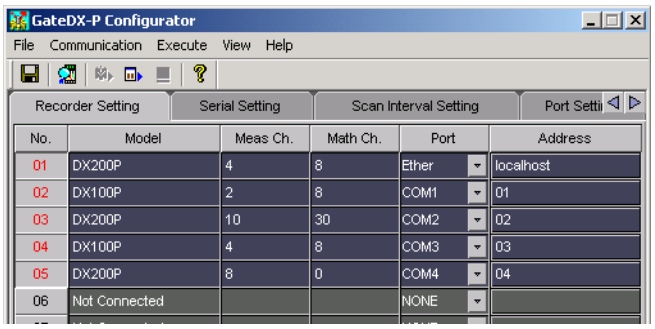
GateDX-P Configurator
File Communication Execute View Help
Recorder Setting
Serial Setting
Scan Interval Setting
Port Setti
No. Model Meas Ch. Math Ch. Port Address
01 DX200P 4 8 Ether localhost
02 DX100P 2 8 COM1 01
03 DX200P 10 30 COM2 02
04 DX100P 4 8 COM3 03
05 DX200P 8 0 COM4 04
06 Not Connected NONE

Scan Interval and Retry Settings

Procedure

1. Click the Scan Interval Setting tab or choose **View > Scan Interval Setting** from the menu bar.

   The Scan Interval Setting tab is displayed.

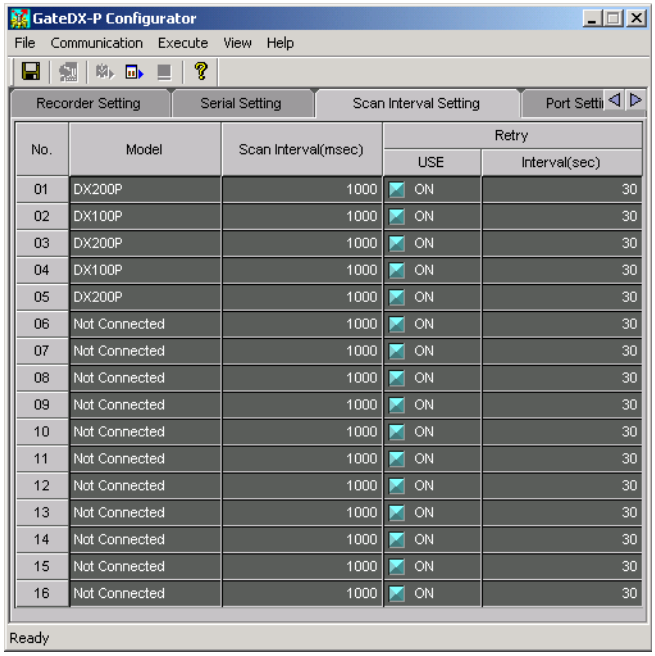
GateDX-P Configurator
File Communication Execute View Help
Recorder Setting
Serial Setting
Scan Interval Setting
Port Setti
No. Model Scan Interval(msec) Retry USE Interval(sec)
01 DX200P 1000 ON 30
02 DX100P 1000 ON 30
03 DX200P 1000 ON 30
04 DX100P 1000 ON 30
05 DX200P 1000 ON 30
06 Not Connected 1000 ON 30
07 Not Connected 1000 ON 30
08 Not Connected 1000 ON 30
09 Not Connected 1000 ON 30
10 Not Connected 1000 ON 30
11 Not Connected 1000 ON 30
12 Not Connected 1000 ON 30
13 Not Connected 1000 ON 30
14 Not Connected 1000 ON 30
15 Not Connected 1000 ON 30
16 Not Connected 1000 ON 30
Ready

Setting the Scan Interval

2. Specify a scan interval from 0.5 to 3600 seconds.

Setting the Number of Retries

3. Turn the communication retry setting ON or OFF.

4. Enter the time interval between retries.
Setting range: 30–3600 seconds

Port Settings

Procedure

1. Click the Port Setting tab or choose **View > Port setting** from the menu bar.
The Port Setting tab is displayed.

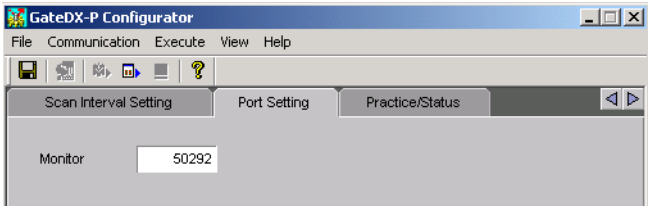

2. You can change the port number used by the monitor server.

Saving Environment Settings

Procedure

1 Click the Save button on the tool bar or choose **File > Save** from the menu bar.

Save button

2.3 Connecting from DAQLOGGER or Remote Monitor

While the executable function is running, DAQLOGGER or Remote Monitor works via Ethernet to log and monitor the data that the DX100P/DX200P is acquiring. Gate-DXP's executable function acts as the client of a DAQLOGGER or Remote Monitor that is running as the monitor server.

In this case, system numbers are assigned as follows:
DX100P/DX200P assigned to Recorder1: 0
DX100P/DX200P assigned to Recorder2: 1

Connecting from DAQLOGGER

Procedure

See section 2.6 of the WX101 DAQLOGGER WX81 DAQLOGGER Client Package User's Manual (IM WX101-01E).

Connecting from Remote Monitor

Procedure

See section 8.1 of the WX101 DAQLOGGER WX81 DAQLOGGER Client Package User's Manual (IM WX101-01E), or section 9.2 of the WX102 DAQ32Plus WX82 DAQ32Plus Client Package User's Manual (IM WX102-01E).

2.4 Process Run/Stop and Service Run/Stop

Running/Stopping from the Menu Bar

Procedure

Running as a Process or Service

1. Click the Service execution or Process execution button on the tool bar. Or, choose **Execute > Service** or **Execute > Process** from the menu bar.

   The executable function starts as a process or service. "Service" or "Process" is displayed under Practice Status on the Practice Status tab.

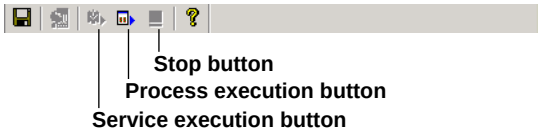

Note

- Service execution can only be specified by users with Administrator privileges.
- Services cannot be executed when using Windows Vista.

Stopping the Process or Service

1. Click the Stop button on the tool bar or choose **Execute > Stop** from the menu bar.

   The Practice Status item shown on the Practice/Status tab displays "Stop."

Running/Stopping the Executable Function from the Execution/Status Tab

Procedure

1. Click the Execution/Status tab or choose **View > Execution/Status** from the menu bar.

   The Execution/Status tab is displayed.

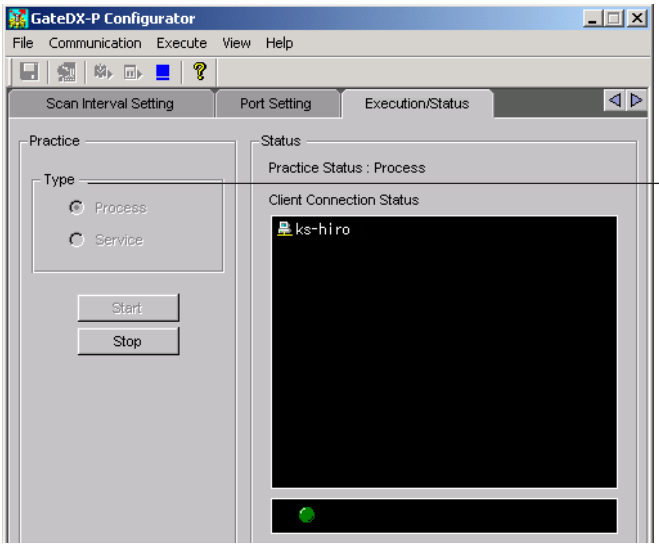

Running as a Process or Service

2. Select to execute the function as a process or service.
3. Click Practice.

   The executable function starts, and "Service" or "Process" is displayed under Practice Status.

Stopping the Process or Service

2. Click the Stop button.

   "Stop" is displayed for the practice status.

2.5 Viewing the Status of the Executable Function

Procedure

Displaying the Connection Status

1. Click the Execution/Status tab, or choose **View > Execution/Status** from the menu bar.

The Execution/Status tab is displayed, allowing you to see the method under which the executable function may be running (as a process or as a service), whether or not it is running, and with which PCs communications are open.

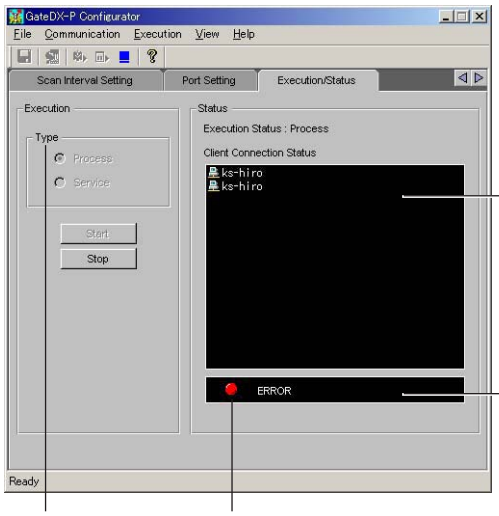

Viewing Error Detail

2. Double-click the box displaying the client communication status on the Execution/Status tab (shown above).

The Error Indicator dialog box opens.

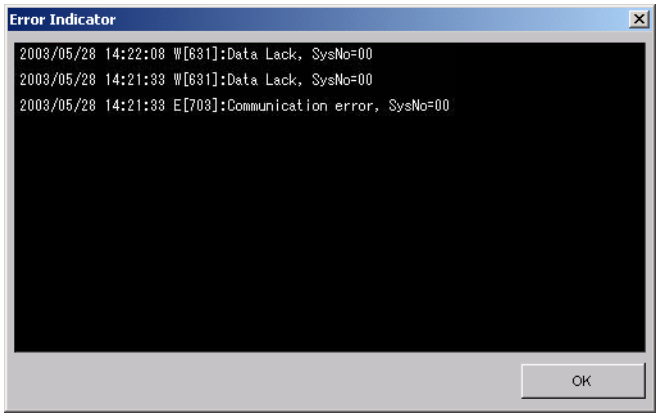

See section 3.3 for error messages.

Note

- If a warning message is displayed (code Wxxxx), the lamp that displays the connection status by color does not blink red.
- When an error occurs and the lamp blinks red, the Error Indicator dialog box appears. If you close the dialog box, the lamp turns green.

2.6 Viewing Version Information

Procedure

1. Click the About button on the tool bar or choose **Help > About** from the menu bar.

About button

The Version dialog box opens.

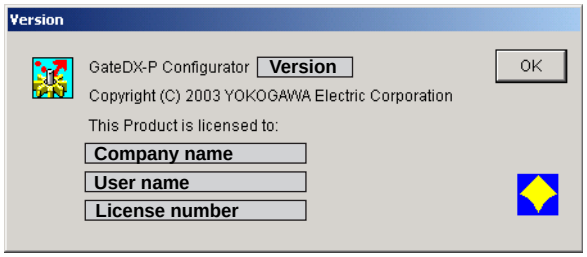

3.1 Overview

Gate-DXP performs Ethernet communications with the DX100P/DX200P and acquires data at regular intervals. Through the monitor server function, the acquired data is transferred to DAQLOGGER or Remote Monitor via Ethernet.
The following is a list of the features of each software function.

Environment Setting Functions

Environment setting functions are used to enter all environment settings required to run the executable function.

- **Serial Port Settings (as Needed)**
  Port
  Type (RS-422A/485 or RS-232-C)
  Baud rate
  Parity
- **Recorder Settings**
  Port
  Address
  User name
  User ID
  Password
  Automatic model determination
- **Scan Interval Settings**
  Scan interval setting for each recorder (0.5 to 3600 sec.)
  Communication retry ON and OFF
  Retry interval
- **Port Settings**
  Port number for monitor server
  Port number for getting status
- **Executable Function Start/Stop**
  Runs as a service
  Runs as a process
- **Executable Function Status Display**
  Practice status display (stopped, running as a service, running as a process)
  Display of the connection status from the client

Executable Function

Features of the executable function are as follows:

- Running as a process and as a service is possible.
- Instantaneous data values are acquired from up to 16 DX100p/DX200Ps at regular intervals.
- Runs as a monitor server via Ethernet if DAQLOGGER or Remote Monitor is the client.

3.2 Detailed Description of Functions

Serial Port Settings

GateDX-P can use the COM1–COM9 serial ports.
The user must enter the following port settings.

- Use/Do not use (ON/OFF)
- Type (RS-422-A/485 or RS-232-C)
- Baud rate: 4800, 9600, 19200, 38400 bps
- Parity bit: NONE, ODD, EVEN

Recorder Settings

GateDX-P allows simultaneous connection with any combination of 16 DX100p/DX200Ps.
The user must enter the following recorder settings.

- Port (COMx or Ethernet)
- Address number (if a COM port using RS-422-A/485 is selected)
- IP address or host name (if Ethernet is selected for the port)
- User name (if Ethernet is selected for the port)
- User ID (if Ethernet is selected for the port)
- Password (if Ethernet is selected for the port)
- Automatic Model Determination

If communication settings are entered correctly, the models, number of measurement channels, and number of computation channels are identified by the software.

Scan Interval

A scan interval from 0.5 to 3600 seconds is selected for each of the 16 DX100P/DX200Ps.

Note

When connecting to DAQLOGGER and acquiring data from the DX100P/DX200P, if GateDX-P's scan interval is longer than that of DAQLOGGER, DAQLOGGER logs the same data repeatedly until the next Gate-DXP scan interval. Therefore, it is recommended that GateDX-P's scan interval be set to a value smaller than DAQLOGGER's scan interval.

Communication Retry

Using the Configurator, you can turn communication retry ON and OFF, and set the retry interval.

- **When Communication Retry Is OFF**
  After detecting that communications were cut, no attempts are made to reconnect.
- **When Communication Retry Is ON**
  After detecting that communications were cut, the software attempts to reconnect after the retry interval has elapsed. Even if the reconnection resulted in an error, the software waits again for the retry interval to elapse, then attempts another reconnection. This process repeats until a valid connection is opened.
  A communication retry interval of 30 to 3600 seconds can be entered.

Note

GateDX-P considers communications to have been cut in the following circumstances.

- If the executable function requests data from a DX100P/DX200P but no response is received within 10 seconds.
- f the software detects that the TCP/IP connection was dropped when the executable function is connected to the DX100P/DX200P via Ethernet.

Port Settings

GateDX-P uses the following ports.

- **Monitor Server Port**
  The TCP/IP port number used for communication with DAQLOGGER or Remote Monitor.

Running/Stopping the Executable Function

The user interface allows you to start and stop the executable function.
The executable function runs under one of the following two methods or "types."

- Process Run/Stop
  The executable function is run/stopped as a process.
- Service Run/Stop
  The executable function is registered as an automatically executing service, then run. After an executable function running as a service is stopped, its registration as a service is deleted. As indicated by the service execution status, the executable function continues processing even when the user has logged off of Windows. Also, the software is automatically run as a service when the computer is turned ON. Service execution can only be specified by users with Administrator privileges. Services cannot be executed when using Windows Vista.

Monitor Server Function of the Executable Function

When the executable function is running, you can connect from DAQLOGGER or Remote Monitor via Ethernet using the remote monitor protocol, and acquire data. In this case, system numbers are assigned as follows:

DX100P/DX200P assigned to Recorder1: system number 0
DX100P/DX200P assigned to Recorder2: system number 1

Executable Function Status Display

The user interface allows you to display status items for the executable function.
The information that can be displayed is as follows:

- Practice status (stopped, running as a service, running as a process)
- Connection status from the client
  Displays a list of PCs running DAQLOGGERS and Remote Monitors with which the executable software has opened a connection.

Group and Channel Assignments

When connected to GateDX-P using Remote Monitor, the initial status of group and channel assignments are as follows:

	Group Name	Waveform Number	Channel Assignment
Group 1	Measure Ch	W01	CH01
		•••	•••
		W30	CH30
Group 2	Math Ch	W01	CH31
		•••	•••
		W30	CH60

Note

When connecting DAQLOGGER to Gate-DXP, group and waveform assignments are ignored.

Channel Names, Tag IDs, and Tag Names

When connected to GateDX-P using Remote Monitor, the channel names, tag IDs, and tag name assignments are as follows:

DX100P/DX200P Channel	Channel Name	Tag ID	Tag Name
CH01	CH01	CH01	DX100P/DX200P tagname
•••	•••	•••	•••
CH60	CH60	CH60	DX100P/DX200P tag name

Note

When connecting DAQLOGGER to Gate-DXP, channel names and tag IDs are ignored. You can download tag names using tag setting software.

Channel Colors

The default channel colors on GateDX-P are those specified on the connected DX100P/DX200P.

3.3 Error Messages and Corrective Actions

Error

No.	Message	Corrective Actions
E211	Cannot write to file.	Check if the disk capacity is sufficient or if the file systems is normal.
E212	Cannot read file.	Check if the file exists and is supported by the software or if the file system is normal.
E213	Cannot open file.	Check if the file exists and is supported by the software or if the file system is normal
E401	Communication error.	Check if the recorder connected for communication is powered on and if the cable is properly connected. Also check the following items according the the communication type. • For Ethernet Check if address settings are correct; the TCP/IP protocol is installed in Windows; the Ethernet card is properly installed. • For RS-232 and RS-422-A Check if the baud rate settings match; the port (COM1 to COM9) settings match, the address settings are correct (RS-422-A); the serial port of the PC is active and the appropriate cable is being used.
E402	Communication timeout.	-
E403	Cannot open a communication port.	Same as E401.
E501	Invalid license number.	
	Please reinstall the software.	
E1001	Login error.	Check the user name, user ID, and password on the DX-P.
E1002	Invalid password.	-
E1003	Password is not valid.	-
E1004	Password expired.	-
	Please set up a password again on the DX-P.	
E1010	Execution of aprocess failed.	Check whether an executable function exists, or whether its files are damaged. If this error appears frequently, reinstall the software.
E1011	Execuition of a service failed.	Check whether an executable function exists, or whether its files are damaged. If this error appears frequently, reinstall the software.
E1012	Login prohibited because another user is logged in.	-

Message

No.	Message
M1201	Model determination was successful.
M1210	Setting changes saved before execution.

Executable Function Messages

No.	Message	Corrective Actions
W[631]	Data Lack	Reduce the number of acquired data points or connected instruments, or lengthen the scan interval.
E[673]	Cannot open communication	Same as E401.
E[674]	Communication error	Same as E401.
E[675]	Communication time out	Same as E401.
E[700]	Cannot login	Same as E1013.
E[701]	Cannot Get DXP inoformation	Check whether the communication status and connected instruments matches those specified in the software. If they do not, perform model determination again.
I[606]	Recovery Communication	Connection recovered.

Index

A

automatic model determination 2-4

C

channel colors 3-4
channel names, tag IDs, and tag names 3-4
communication retry 3-2
configurator 2-2
connecting from DAQLOGGER 2-6
connecting from Remote Monitor 2-6

D

displaying the connection Status 2-8

E

environment setting functions 1-4, 3-1
executable function 1-4, 3-1
executable function start/stop 3-1
executable function status display 3-1, 3-3
exiting the software 2-1

G

group and channel assignments 3-3

H

hardware requirements 1-2

M

message 3-5
monitor server function 3-3

O

Overview 1-1

P

Port Settings 2-5
port settings 2-3, 3-1, 3-3
Process 2-7

R

Recorder Settings 2-2
recorder settings 3-1, 3-2
required operating systems 1-2
Retry Settings 2-4
running/stopping the executable function 3-3
running as a process or service 2-7
running the software 2-1

S

saving environment settings 2-5
Scan Interval 2-4
scan interval 3-2
scan interval settings 3-1
Serial Port Settings 2-2
serial port settings 3-1, 3-2
Service 2-7
software configuration 1-4
software license ii
stopping the process or service 2-7
system 1-2
system configuration 1-4
system numbers 2-6

V

version information 2-9
viewing error detail 2-8